 
 


Assembly Instructions

MODEL NO:M2-SC186-LEF

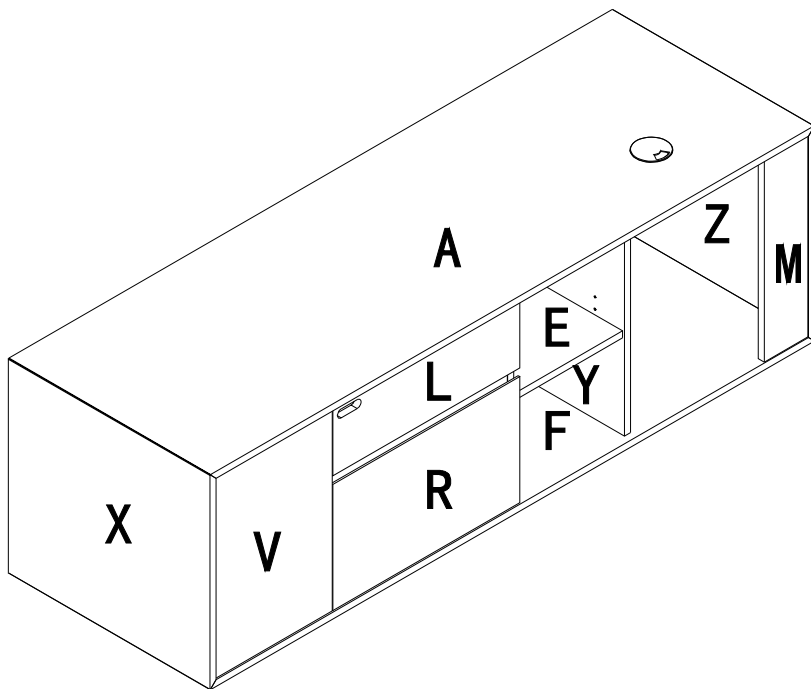


Pin 6×35 1 43PCS	Shelf Pin 8PCS 5	73×23×15 2PCS 11
Cam 43PCS 2	ADJ. Feet ø18×5H 8PCS 6	ø6×40 2PCS 12
Cam Cover 43PCS 3	Wood Screw 4×16 18PCS 7	Wood Screw 4×40 2PCS 13
Hinge(inset) 2PCS 4	300x80 1PCS 8	
Allen Wrench M4 1PCS 10	Wood Screw 4×30 6PCS 9	

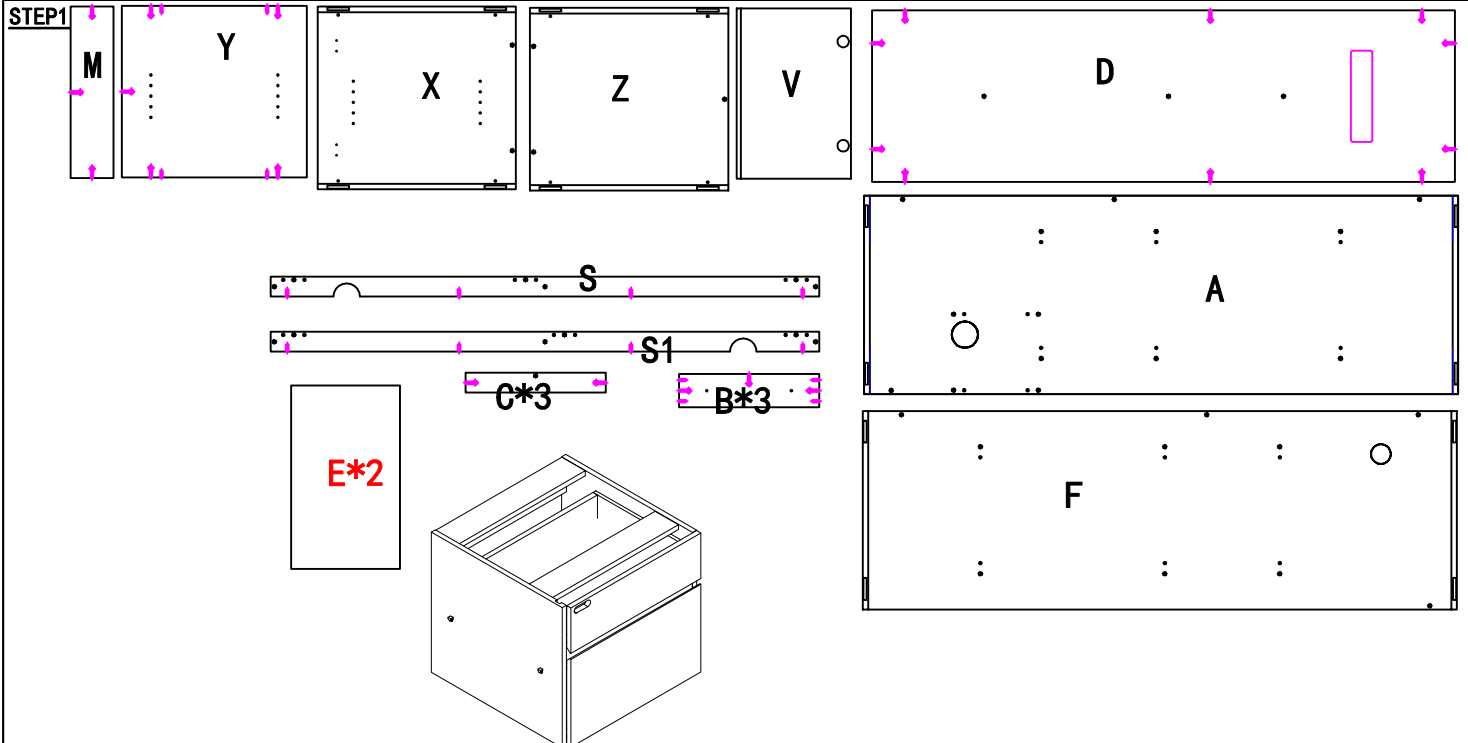

IMPORTANT NOTE:

 
- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children




Assembly Instructions

MODEL NO:M2-SC186-LEF

 STEP2

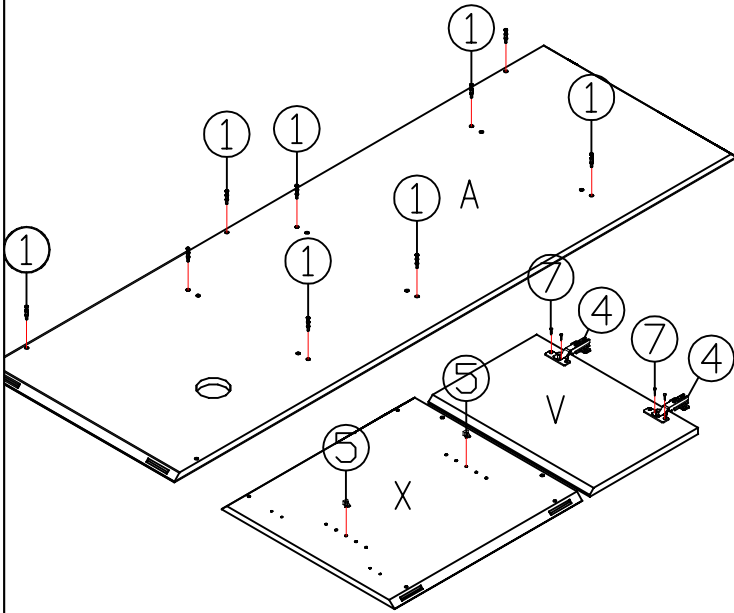


 STEP3

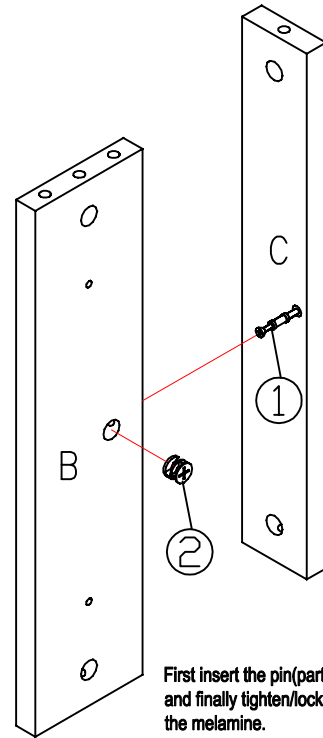


First insert the pin(part#1), then place the cam(part#2), and finally tighten/lock off after they have been put into the melamine.

 STEP4

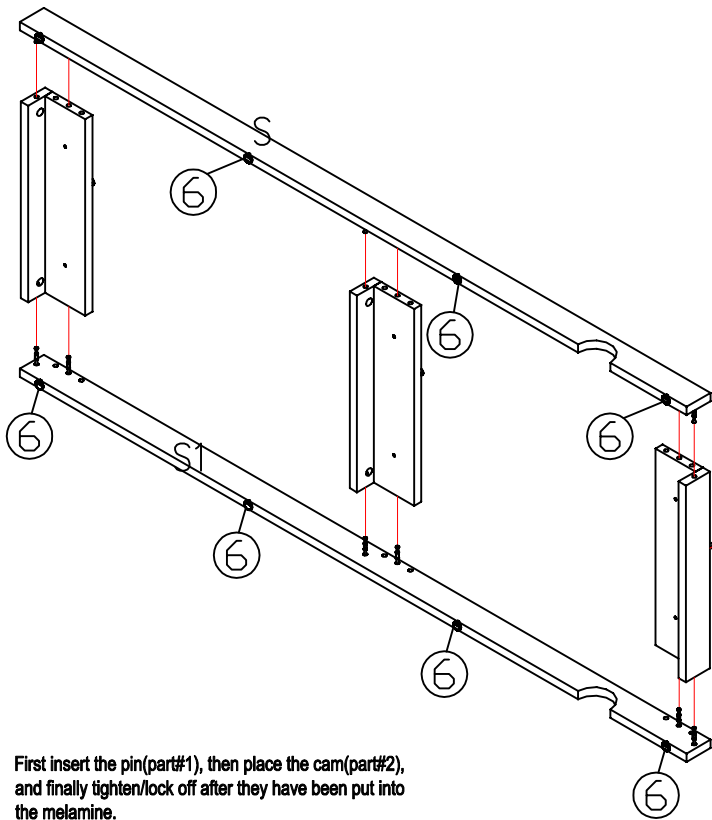

First insert the pin(part#1), then place the cam(part#2), and finally tighten/lock off after they have been put into the melamine.

 
STEP5

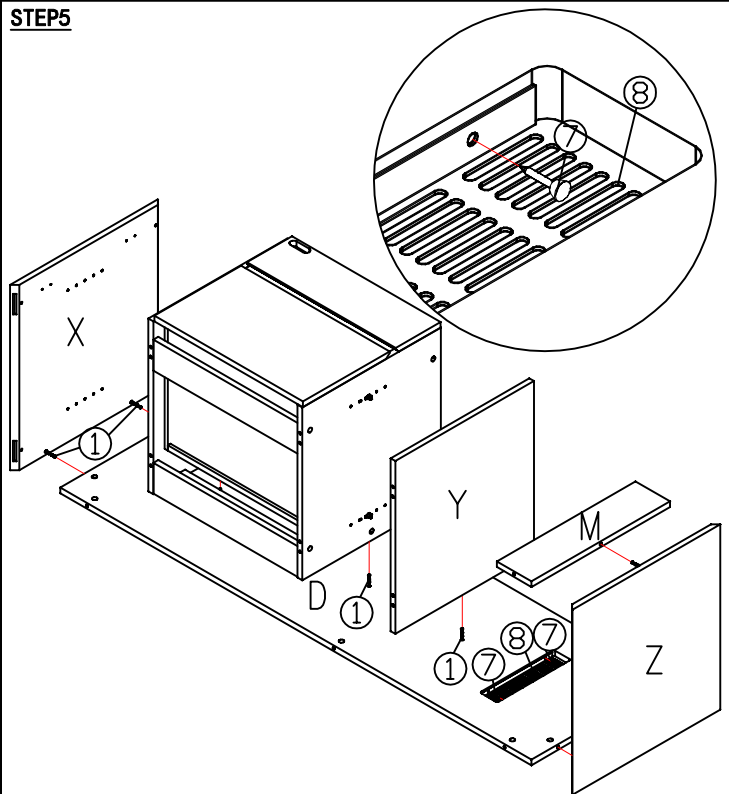

First insert the pin(part#1), then place the cam(part#2), and finally tighten/lock off after they have been put into the melamine.

IMPORTANT NOTE:

 - Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children




Assembly Instructions


MODEL NO:M2-SC186-LEF

STEP6

 
First insert the pin(part#1), then place the cam(part#2), and finally tighten/lock off after they have been put into the melamine.

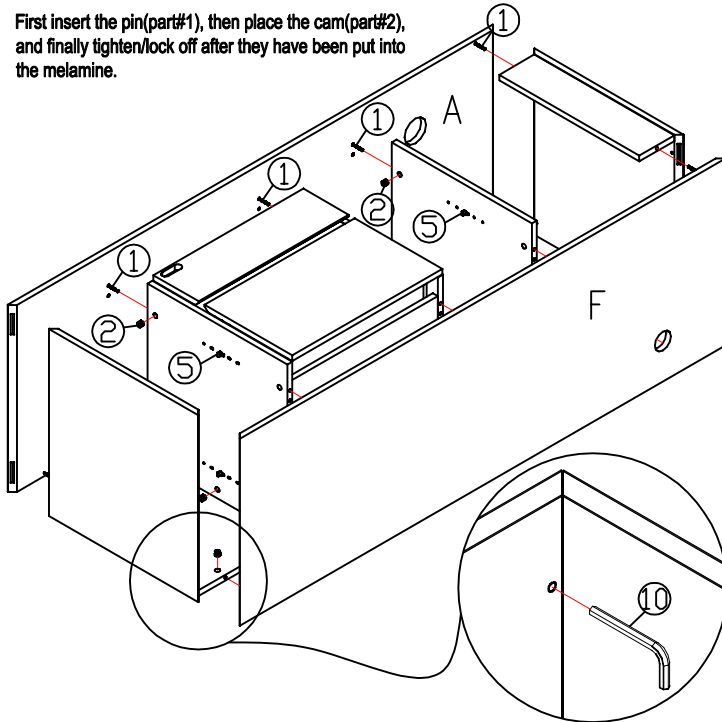


 
STEP7

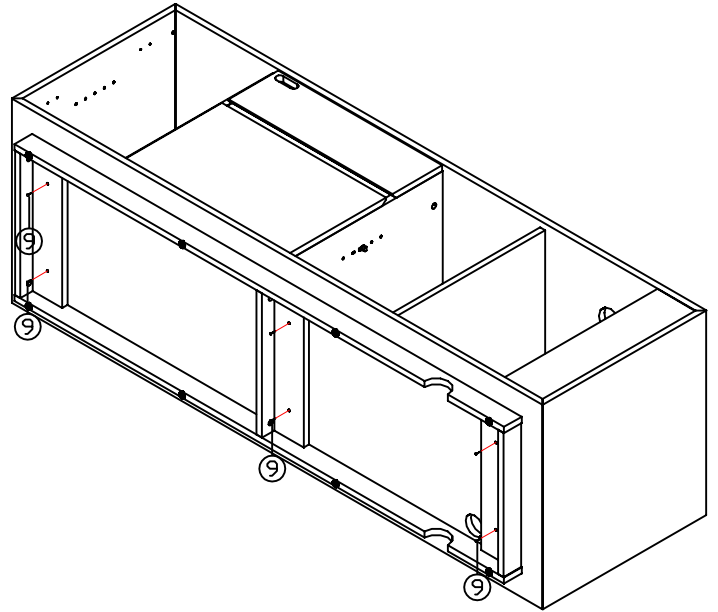

 STEP8

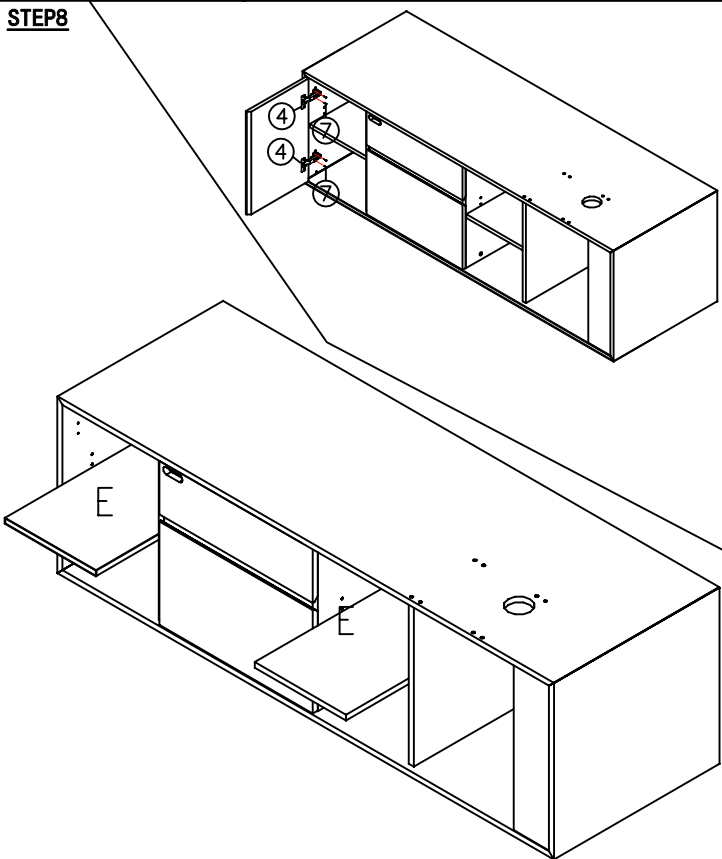

  
STEP9

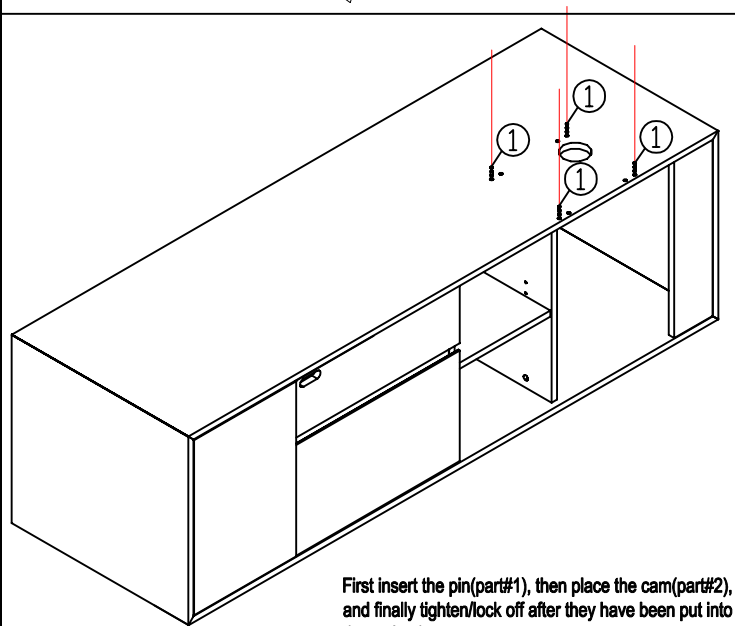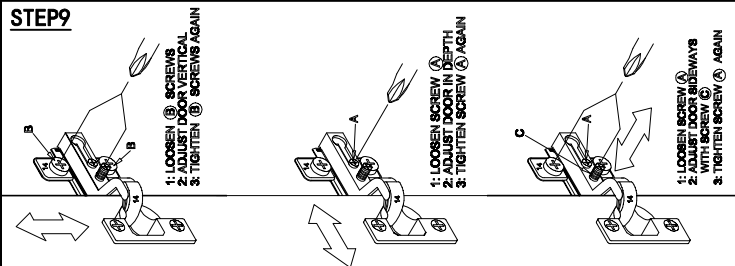

First insert the pin(part#1), then place the cam(part#2), and finally tighten/lock off after they have been put into the melamine.

IMPORTANT NOTE:

 - Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials,including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children




Assembly Instructions


MODEL NO:M2-SC186-LEF

The warning sticker provided within this hardware kit **MUST** be attached to the piece furniture in a place that is 100% visible when the item is empty.

 STEP10 WALL Make a mark with a pencil

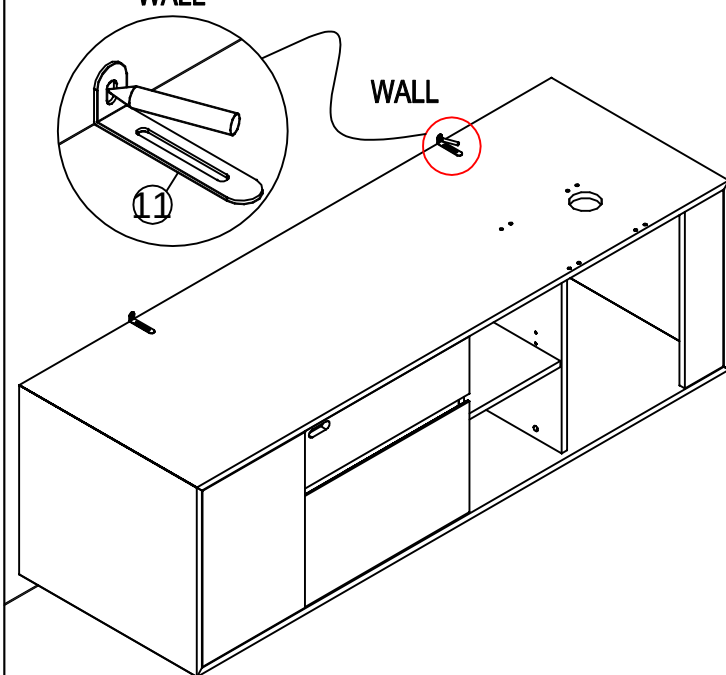


 STEP11

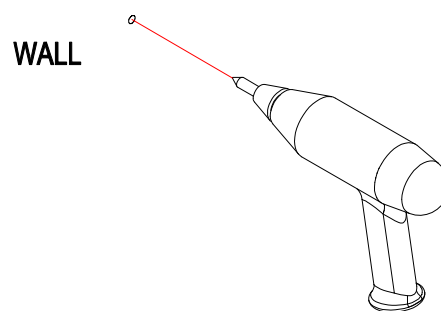


Drill holes at the marks with an electric drill

 
STEP12

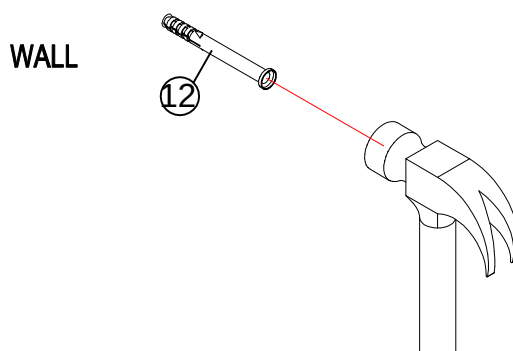

 STEP13

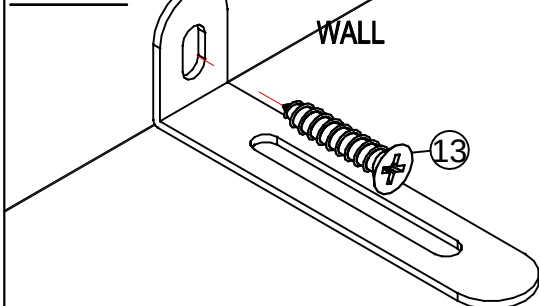

 STEP14

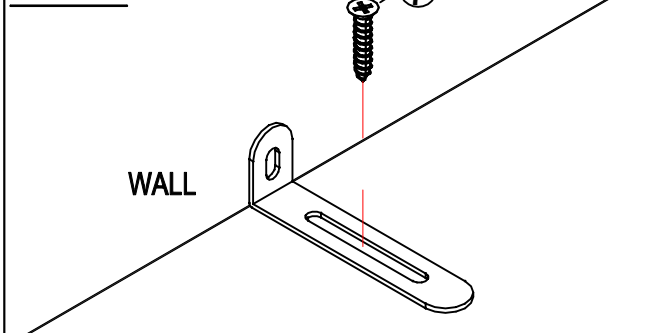

⚠ WARNING



NEVER put a TV
on this Furniture



This furniture type is at high risk of toppling over.

Children have died from furniture tipover.

 
- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors or shelves.
- NEVER open more than one drawer at a time
- PLACE heavy items down low.

Ask staff for more information or visit
<http://www.productsafety.gov.au>

This is a permanent label. **Do not remove!**


IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children



Assembly Instructions

 
MODEL NO: M2-TM188-LEF

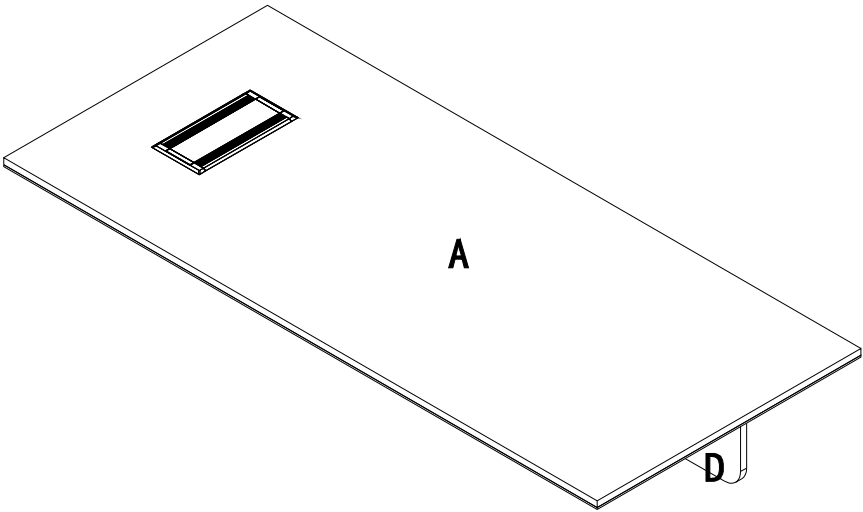


Pin	6x35	1
		15PCS
Cam		2
		15PCS
Cam Cover		3
		15PCS
Cable Cover 300x145 A23-1		4
		1PCS

the table top is to be used with M2-SC186-LEF Cupboard

 STEP1

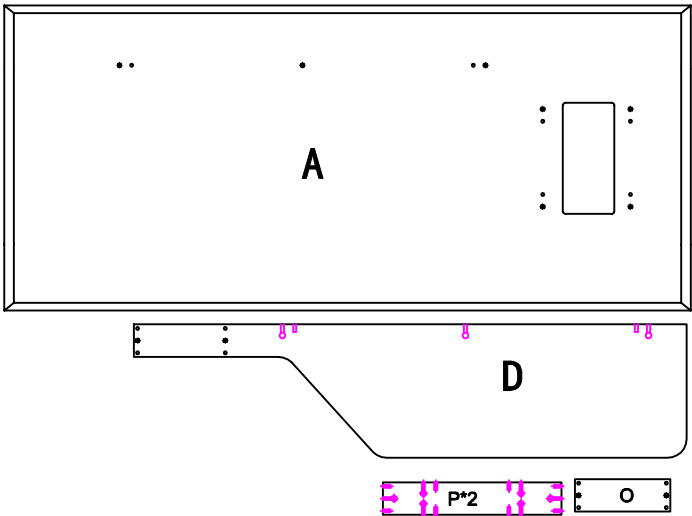


 STEP2

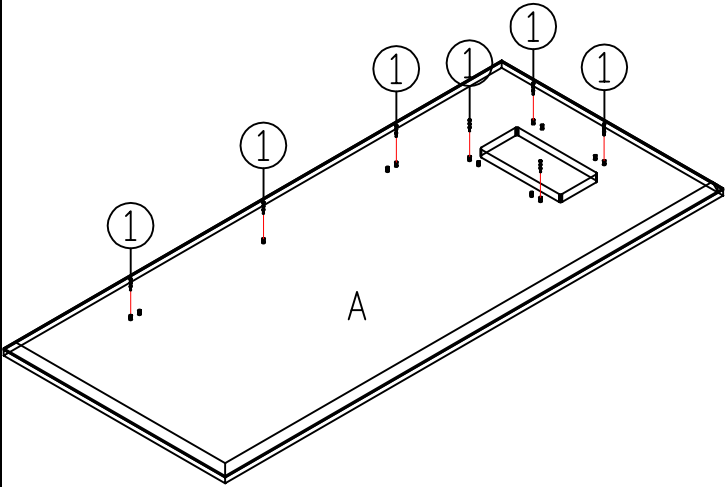

IMPORTANT NOTE:

 
- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials,including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children



Assembly Instructions


MODEL NO: M2-TM188-LEF

 STEP3

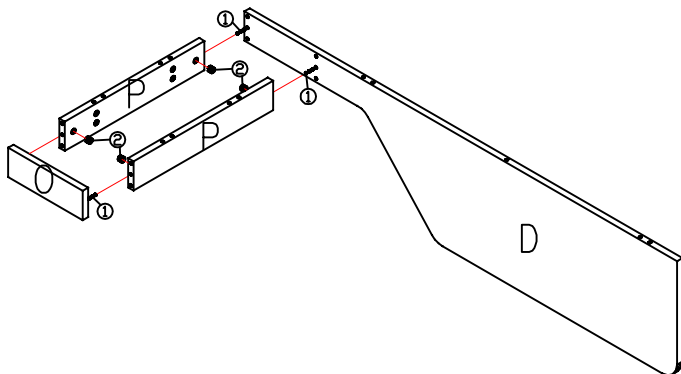


First insert the pin(part#1), then place the cam(part#2), and finally tighten/lock off after they have been put into the melamine.

 STEP4

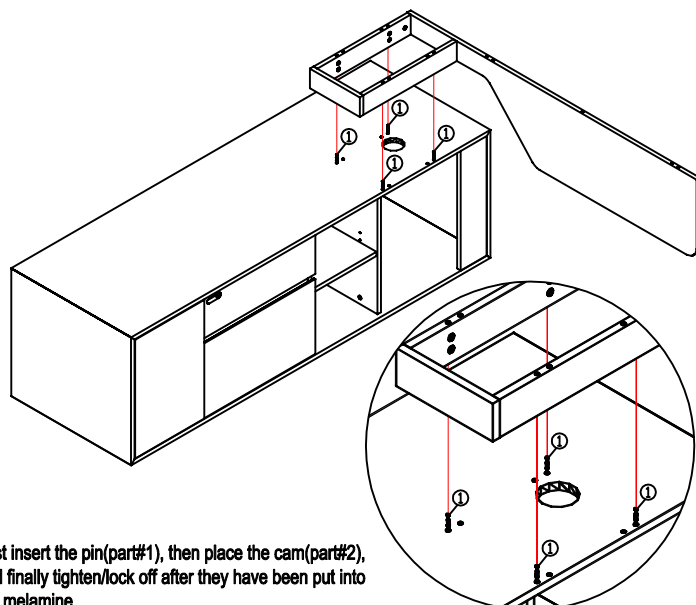


First insert the pin(part#1), then place the cam(part#2), and finally tighten/lock off after they have been put into the melamine.

 STEP5

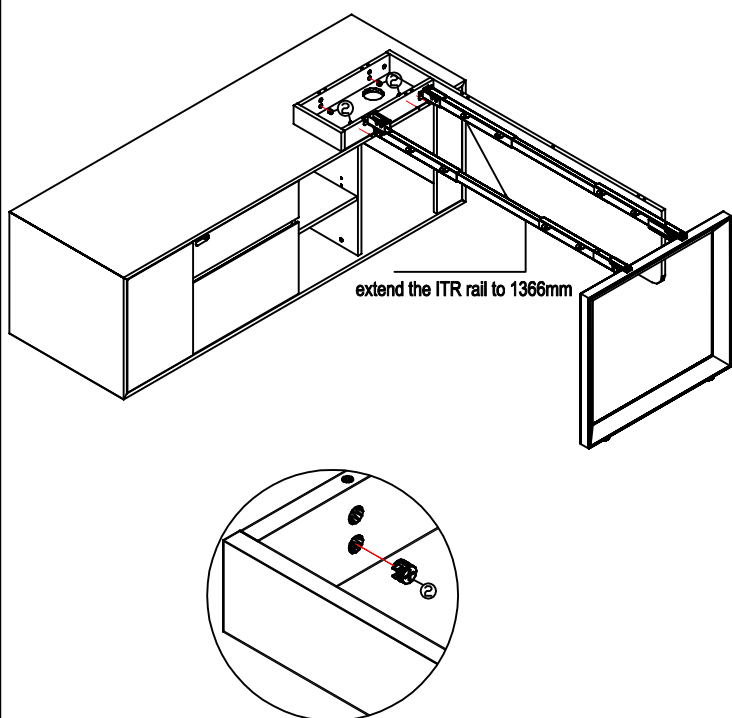

First insert the pin(part#1), then place the cam(part#2), and finally tighten/lock off after they have been put into the melamine.

 
STEP6

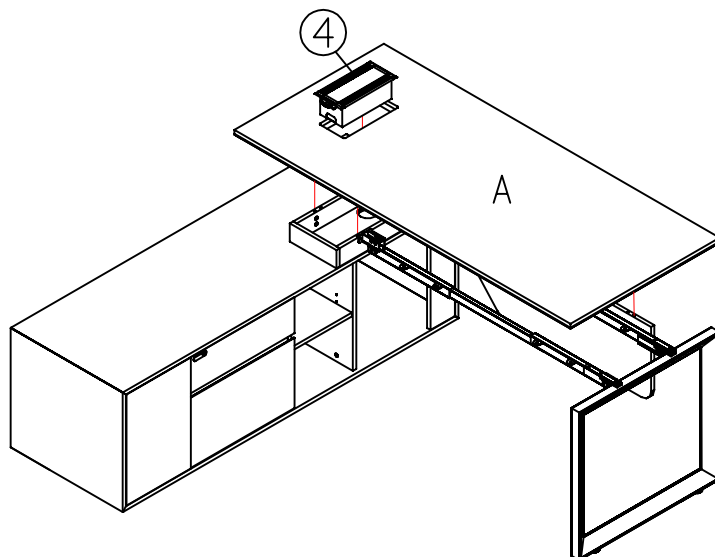

First insert the pin(part#1), then place the cam(part#2), and finally tighten/lock off after they have been put into the melamine.

IMPORTANT NOTE:

 - Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children



OPERATING INSTRUCTIONS

FOR  COMBI-PUBLIC



■ TO CHANGE THE SECRET CODE



1. THE PRESET FACTORY CODE IS 0-0-0-0. TO CHANGE THE SECRET CODE, ROTATE THE KNOB TO OPEN POSITION.



2. THE NEW SECRET CODE CAN BE RESET, E.G. 1-1-1-1.

■ TO LOCK



1. TURN THE DIALS TO THE SET CODE, E.G. 1-1-1-1 AND ROTATE THE KNOB TO CLOSE POSITION.

 


2. TURN THE DIALS TO ANY NUMBER, E.G. 2-2-2-2 FOR LOCKING.

■ TO UNLOCK



1. TURN THE DIALS TO THE PREVIOUSLY SET SECRET CODE, E.G. 1-1-1-1.

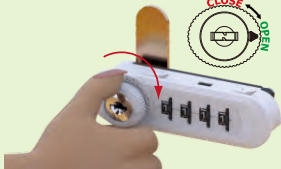

2. ROTATE THE KNOB TO OPEN POSITION.

■ TO RECOVER THE SECRET CODE WHEN THE LOCK IS IN CLOSE POSITION



1. INSERT THE KEY INTO THE KNOB AND TURN TO OPEN POSITION DIRECTION UNTIL STOP.



2. TURN EACH OF THE DIALS UNTIL IT CANNOT MOVE (ALL FOUR DIALS) TO RECOVER THE FORGOTTEN SECRET CODE.



3. TURN THE KEY TO CLOSE POSITION DIRECTION UNTIL STOP AND PULL THE KEY OUT. THE LOCK CAN NOW BE USED NORMALLY.

HOW TO SWITCH BETWEEN FUNCTIONS

FROM  PRIVATE TO  PUBLIC



1. THE LOCK IS IN OPEN POSITION.



2. SLIDE THE FUNCTION SWAP BUTTON TO PUBLIC TO CHANGE THE FUNCTION TO COMBI-PUBLIC.

FOR STEP 2, REMOVE THE CAM SHOULD IT OBSTRUCT THE SWAP BUTTON.

FROM  PUBLIC TO  PRIVATE



1. THE LOCK IS IN OPEN POSITION. THE SECRET CODE CAN BE RESET RIGHT AWAY E.G. 1-1-1-1.



2. ROTATE THE KNOB TO CLOSE POSITION.



3. SLIDE THE FUNCTION SWAP BUTTON TO PRIVATE.



4. ROTATE THE KNOB TO OPEN POSITION TO CHANGE THE FUNCTION TO COMBI-PRIVATE.

FOR STEP 3 REMOVE THE CAM SHOULD IT OBSTRUCT THE FUNCTION SWAP BUTTON.