


ASSEMBLY INSTRUCTIONS

MIRAGE HB GBL

rapidline

STEP-1

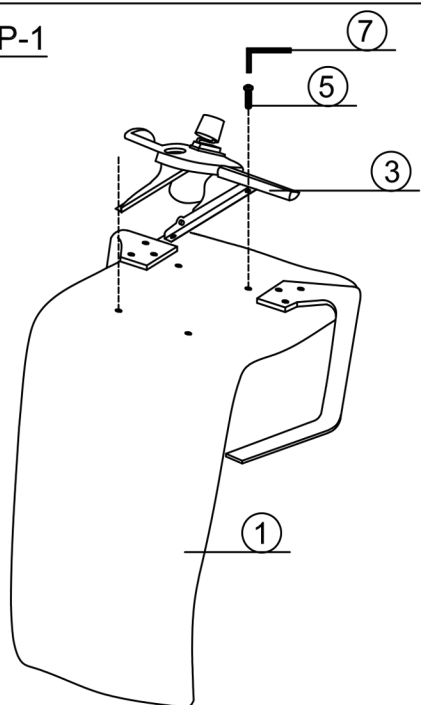

FINISH



Back



1

1PC

Star Base



1PC

Mechanism



1PC

Castor



4

5PCS

Screw



M6x25

5

4PCS

Gaslift



6

1PC


Wrench



7

1PC

STEP-2

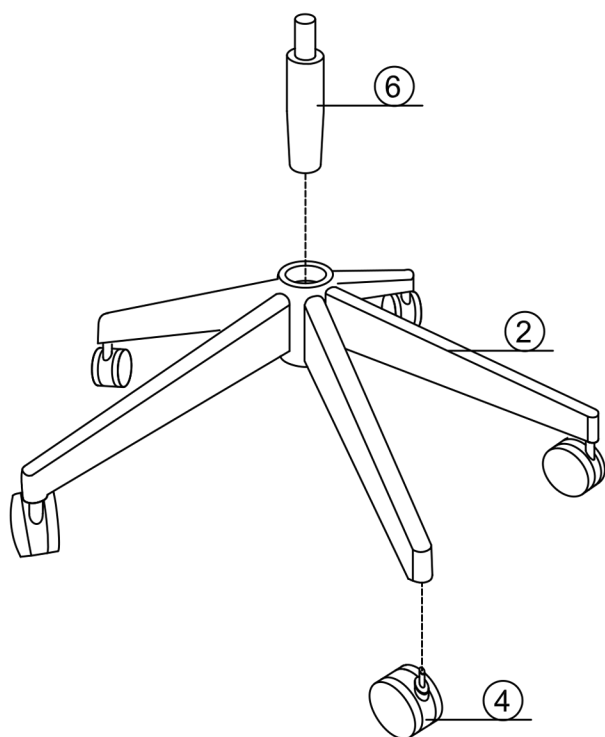

STEP-3



IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children

