


420*297mm

rapidline
FURNITURE FOR TODAY

REATVM
INSTALLATION GUIDE

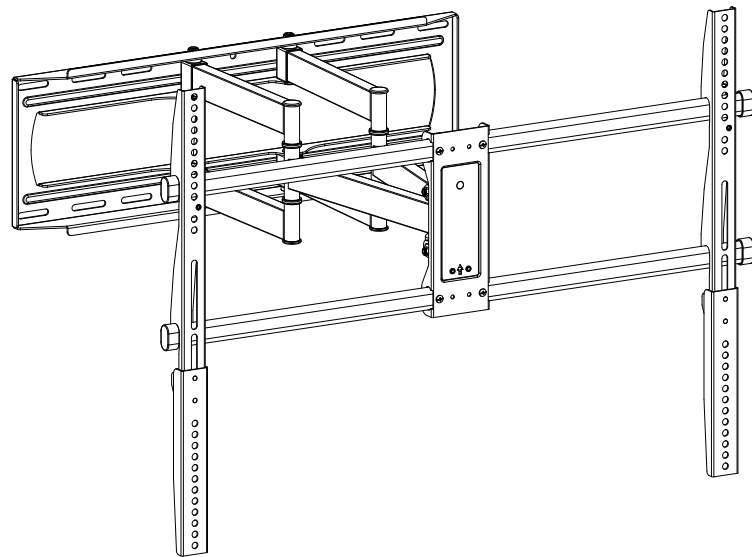

Max:
154LBS
(70KG)



Max:800x600mm/31.5x23.6"
Min:200x100mm/8x4"


Safety Caution

Please read this instruction carefully before installation.
If you do not understand these instructions or have doubts about the safety of the installation, assembly or use of this product, please contact us.


- This product is designed for use in wood stud or solid concrete wall.
- **DO NOT install into drywall alone.**
- The wall must be capable of supporting five times the weight of the TV and mount combined.
- Incorrect installation may result in product damage or body injury.

WARNING: This product contains small items that could be a choking hazard if swallowed.
Before starting assembly, verify all parts are included and undamaged. For parts shortage or damage, please contact us.




Must Check Before Getting Started

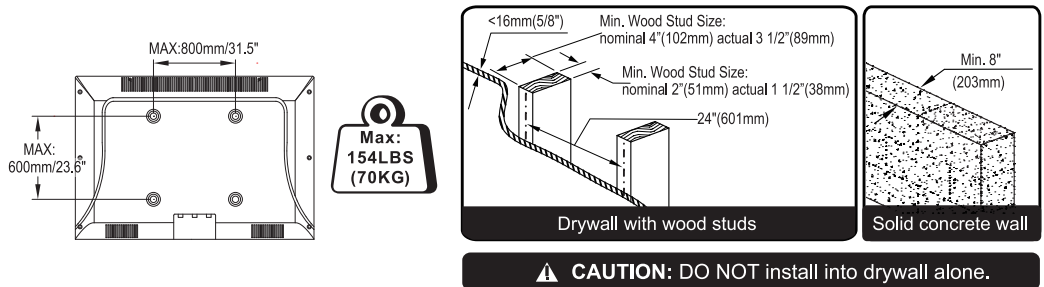


Installation Tools (Not Included)

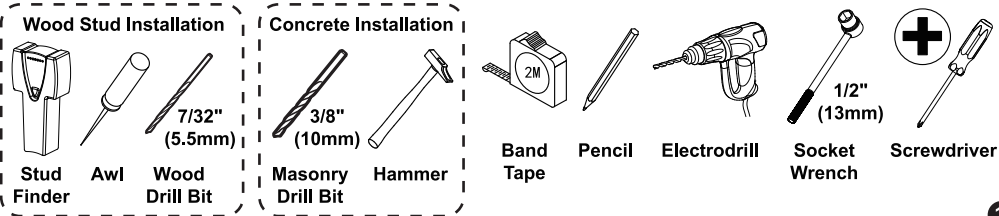


Hardware Included

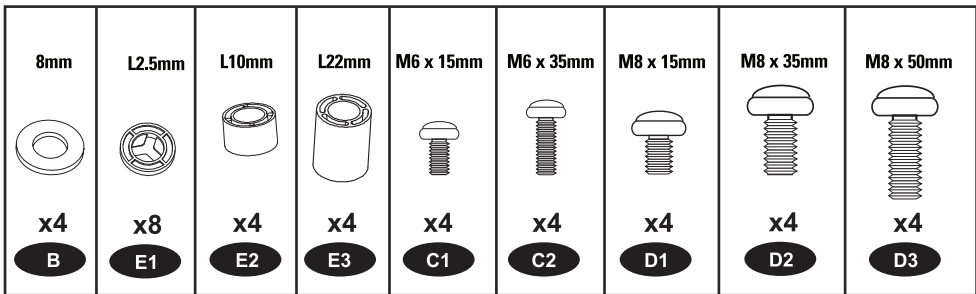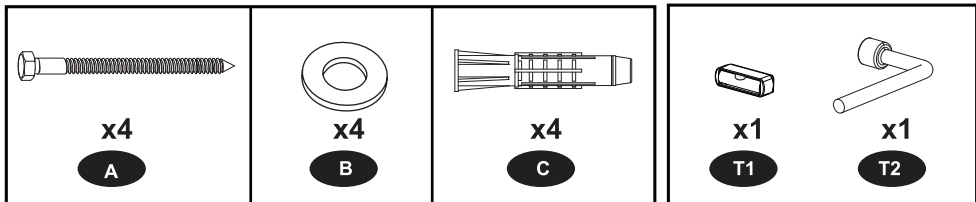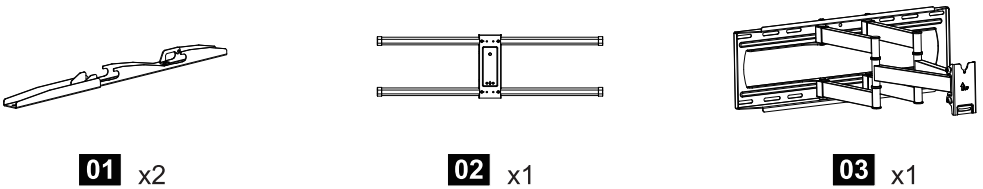

Step 1-1 Select TV screw

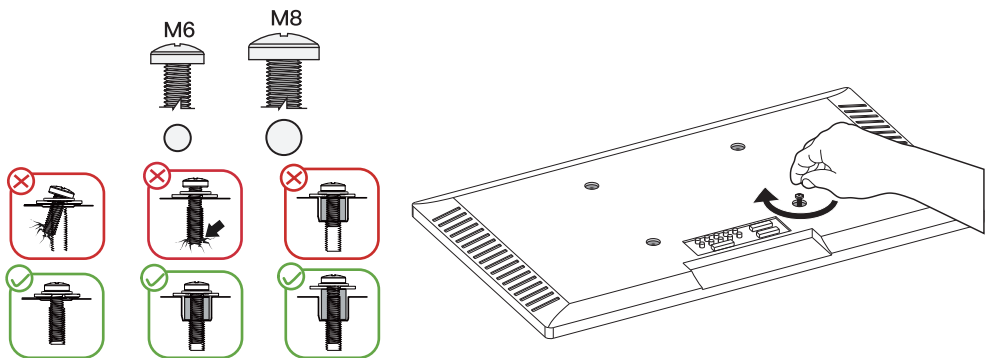


Opt: Used for TV VESA diagram smaller or equal 800*400mm

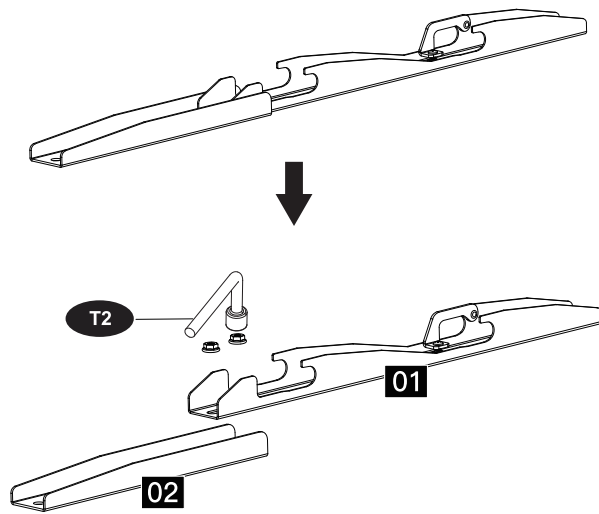


Step 1-2 Attach the bracket

(a) For Flat Back

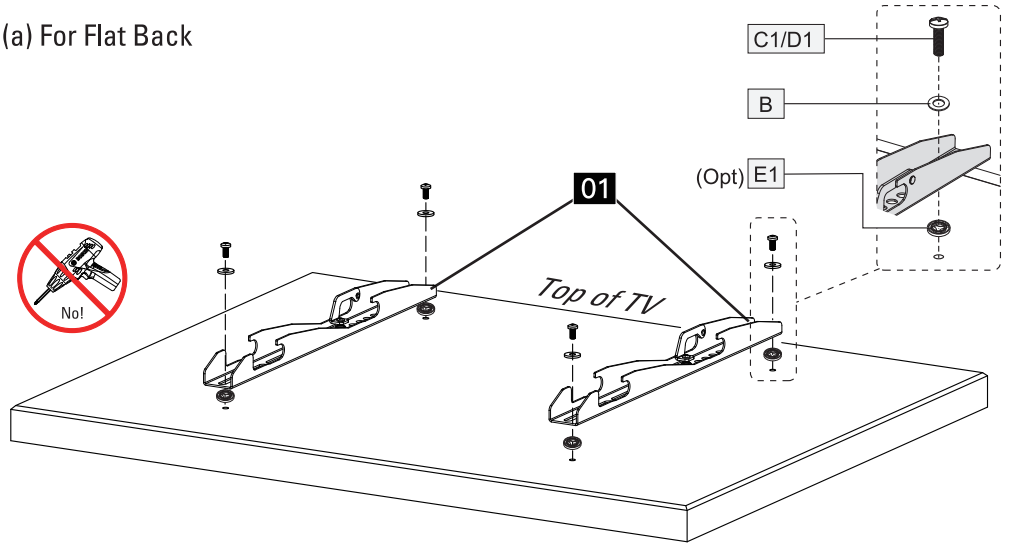


(b) For Round Back / Extra Space

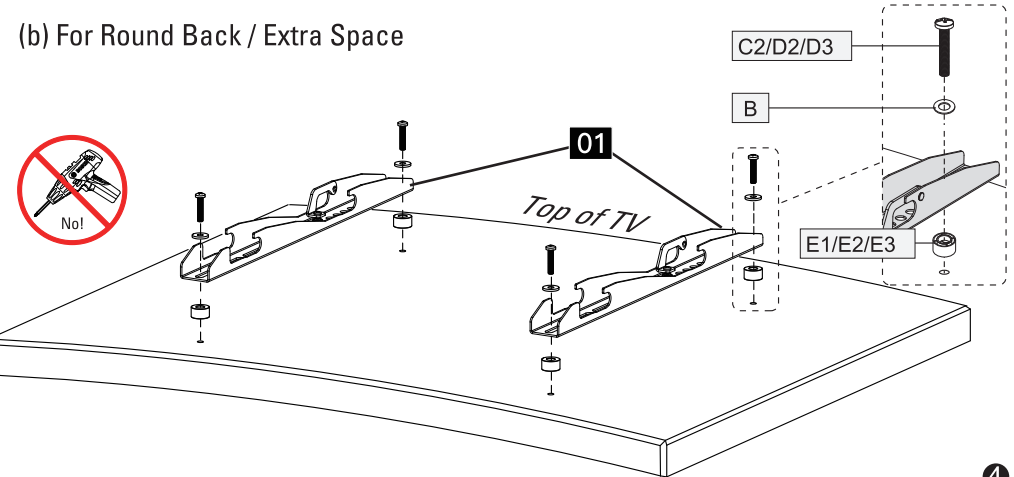


Step 2A Wall plate installation (wood stud)

A-1

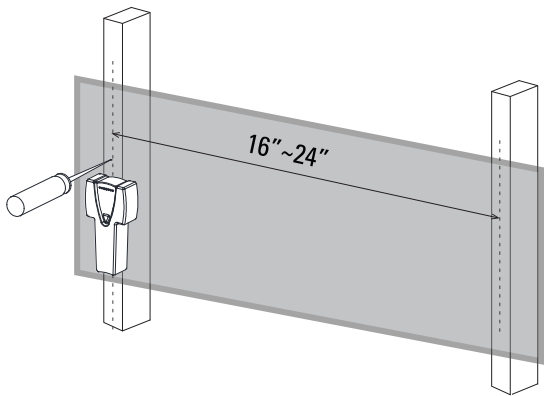


A-2

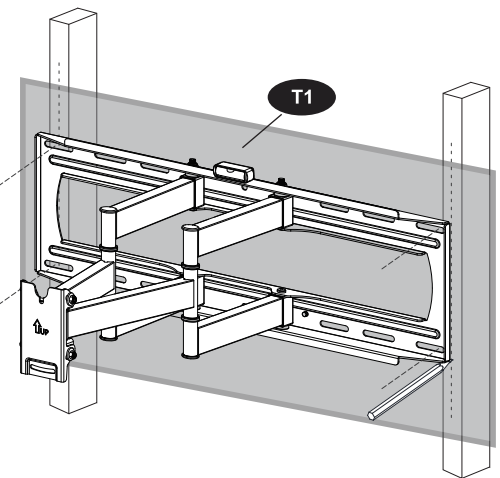


420*297mm

A-3

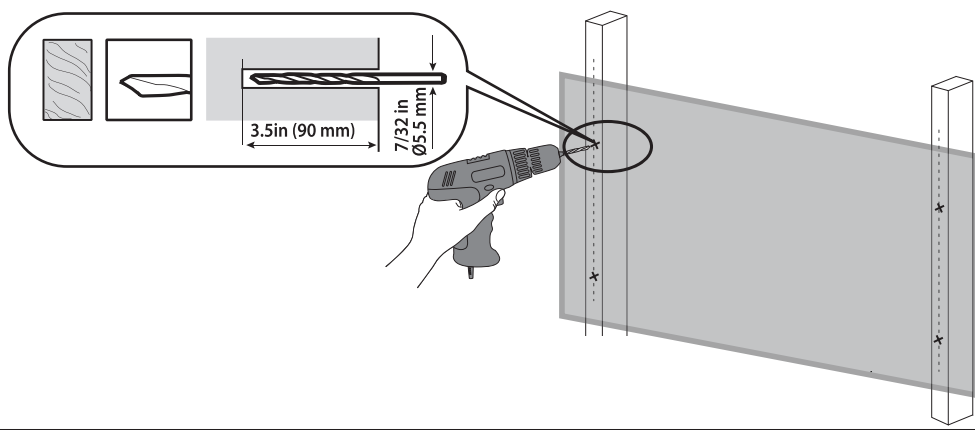


Step 2B Wall plate installation (concrete or brick)


B-1

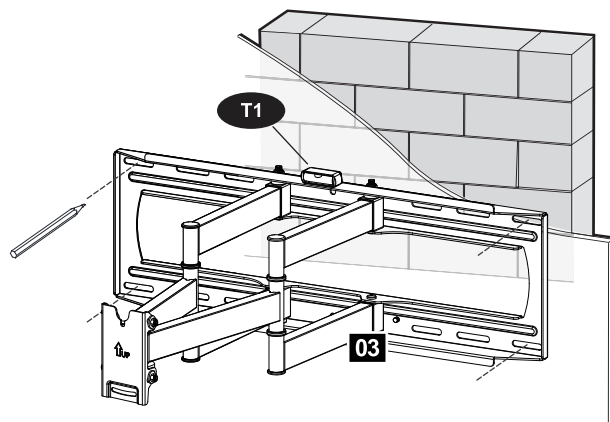



B-3

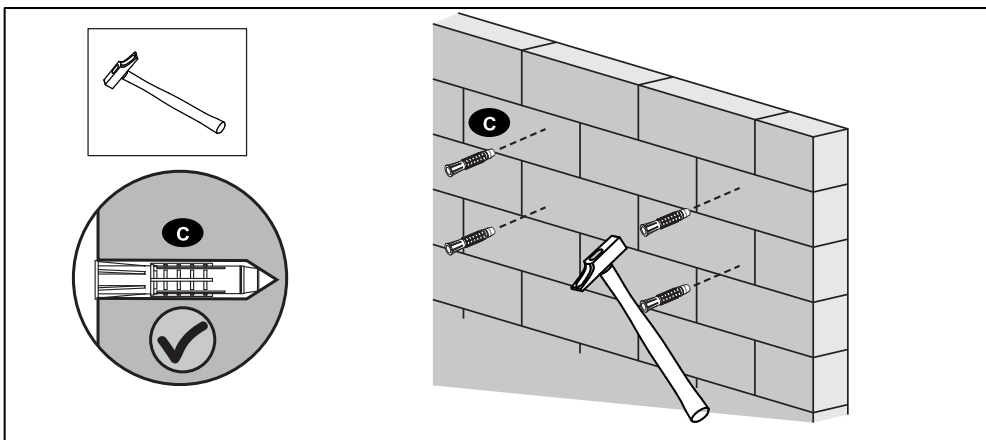


A-4

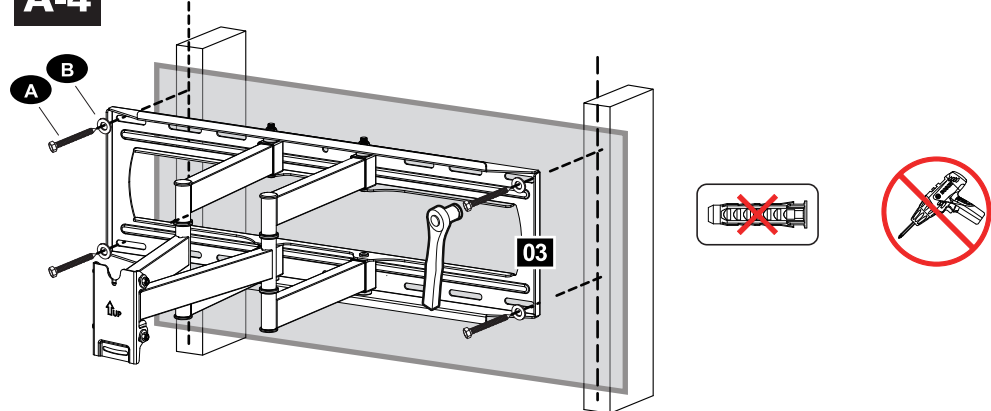

B-2

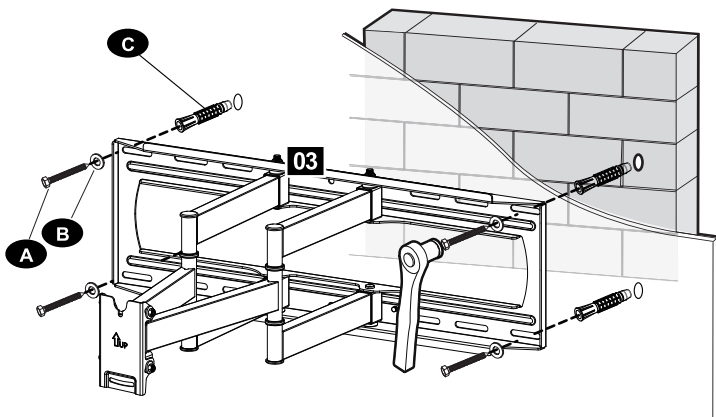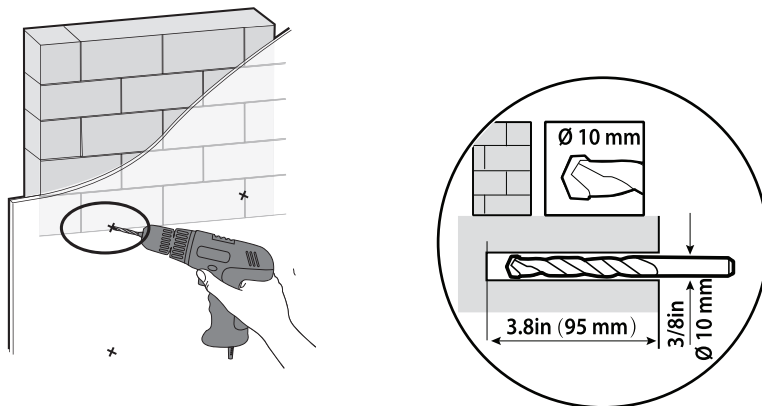


STEP 3 Install front support and wall bracket together

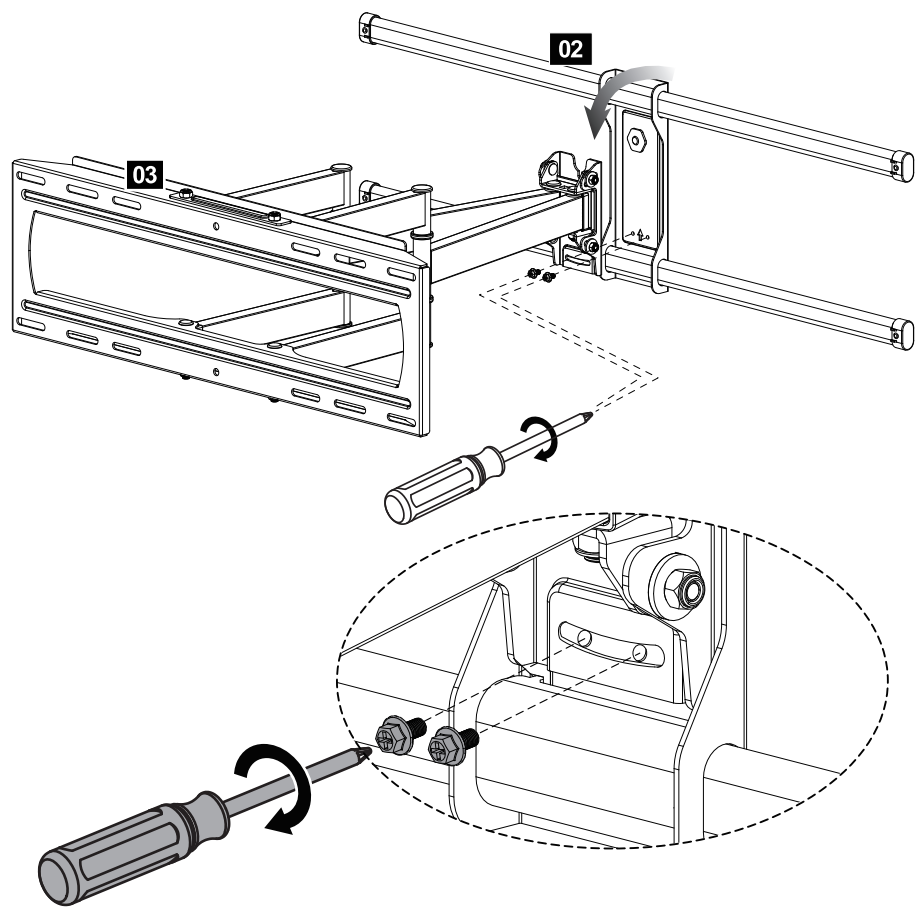


STEP 4 Secure the TV


4-1

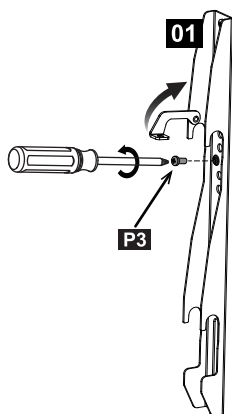

4-2

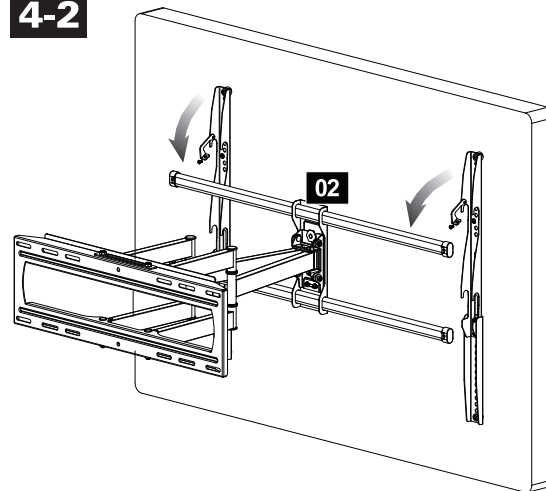


4-3

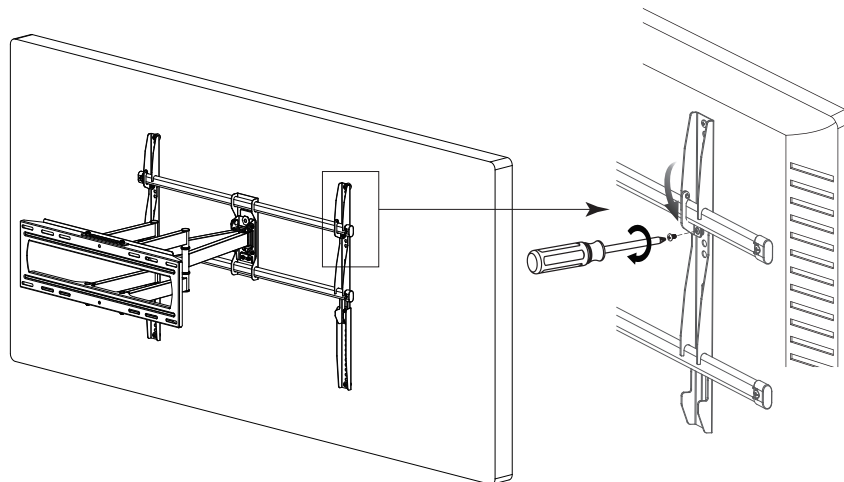

Adjustments

TV Tilting adjustment (-5°/+10°)

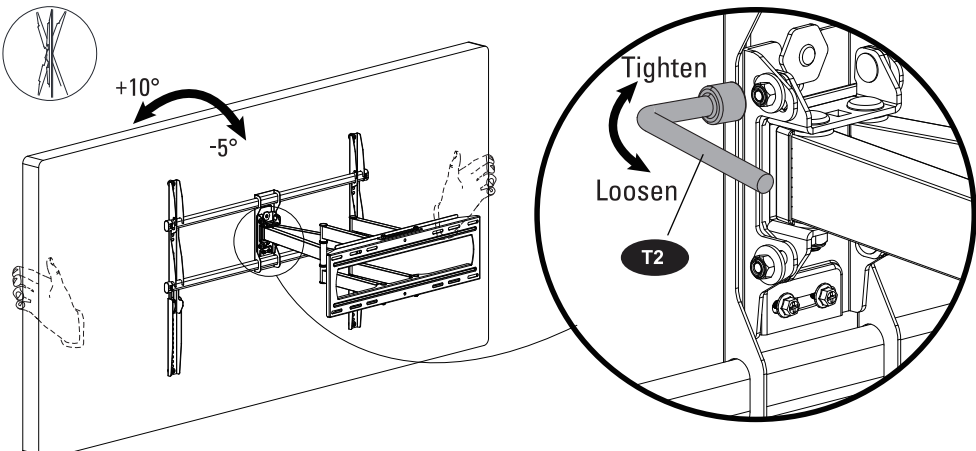

TV leveling adjustment (-3°/+3°)

